

## WATCO MANUFACTURING COMPANY Instructions for Installing Watco Innovator® Cable Bath Wastes

Models: Watco CableFlex<sup>™</sup>: 928, 938, 948 - Watco Cable: 970, 980, 990 - Half Kits: 971, 981, 991



Step 1: Cut the 1<sup>1</sup>/<sub>2</sub>" Schedule 40 (or Flexible PVC) overflow pipe and drain pipe (*Items 14 and 16*) to the desired lengths to fit the tub.

Step 2: Using standard solvent cement procedures, assemble the bath drain pipe and fittings (Items 13-16, and 19). DO NOT LET SOLVENT CEMENT FLOW INSIDE THE OVERFLOW OR DRAIN ELBOWS PAST THE SOCKET! Any excess glue will prevent the bath waste from operating.

> Step 3: Place the thick foam gasket (Item 12) onto the overflow elbow (Item 13). The testing membrane will still be attached. Thick-walled tubs will require the thin gasket (Item 11).

Step 4: Insert the overflow elbow and foam gasket assembly through the tub overflow hole from the back of the tub (Figure 1).






13



Figure 2

Step 5: Screw on the overflow elbow (OE) nut (*Item 3*) from inside of the tub (Figure 2). HAND TIGHTEN ONLY until the nut is snug and the gasket is only slightly compressed against the back of the tub. You must get a minimum of  $1\frac{1}{2}$  turns when installing the nut. If there are not enough threads sticking through the tub to get the nut installed, remove the thick gasket (Item 12) and replace it with the thin gasket (Item 11).

21

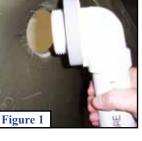







If the bath waste will not be pressure tested, skip to step 8.

Step 7: Screw the strainer test plug (Item 26) into the strainer body Item 21) and test the system (Figure 5).

19

20



Step 8: After the pressure testing is complete, remove the test plug (Item 26). Cut away and discard the orange test membrane from the overflow elbow (Figure 6). Use caution not to damage internal parts on the inside of the overflow elbow.

Step 6: Secure the drain elbow (Item 19) and drain

flange gasket (Item 20) under the tub by screwing

in the strainer body (Item 21) through the tub

the flange of the strainer body and the tub. CAUTION: Do not use linseed oil based putty products. Use only thread compounds specifically intended either for ABS or PVC assembly.

drain hole from inside the tub (Figures 3 and 4). If desired, a putty or sealant may be used between



Continued next page. 970INST Rev. 4/11

© 2011 Watco Manufacturing Company

## Watco Innovator<sup>®</sup> Cable Bath Wastes Installation Instructions Continued



Step 9: Select the faceplate adapter (Item 5, 6, or 7) that leaves the desired gap between the tub wall and the edge of the faceplate (Item 2). (See included adapter selection instruction sheet.)

Place adapter onto the drive shaft (*Item 8*) (Figure 7). If you have selected an adapter that is too short, the spacer tabs on the inside of the faceplate will rub on the OE nut (*Item 3*), and the adapter screw hole will not line up with the faceplate screw hole.

Once the desired faceplate adapter is determined, secure the faceplate adapter to the drive shaft using the screw provided (Item 4) (Figure 8).







Secure the faceplate (*Item 2*) to the faceplate adapter (Figure 9) using <u>either</u> the faceplate screw (*Item 1*) (Figure 10). (Leave the plastic sleeve on threads to help align the screw.)

or the optional ADA handle.





Tighten the faceplate screw until it is flush with the faceplate and snug (or if using the handle, until it is snug). DO NOT OVERTIGHTEN.





Step 10: Rotate the faceplate CLOCKWISE to the fully-closed position. Install the core guide (Item 22) into the strainer body using a screwdriver or 7/16" socket (Figure 11). (See core guide instruction card included with kit.) The core guide should be screwed in until it is snug against the bottom of the drain elbow. Insert the stopper (Item 24) into the core guide (Item 22) (Figure 12).

Step 11: Test the cable unit for proper operation. In the fully-closed position, with the faceplate (Item 2) rotated clockwise, the stopper (Item 25) should rest and seal on the strainer body flange. In the fully-open position, with the faceplate (Item 2) rotated

counterclockwise past the click, the stopper should open to a height of  $\frac{1}{2}$  -  $\frac{3}{4}$  above the strainer body flange. The plastic cable core should move freely inside the core guide (Item 22) when the faceplate is turned. Adjustments to the open height can be made using the stopper adjustment screw (Item 24).





Independence, MO 64057-2724 Phone: 816-796-3900 • 800-821-8576 Fax: 816-796-0875 • 800-399-2826 www.watcomfg.com

## If installing the Theft-Resistant Option:



Step 1: Remove stopper seal.



Step 2: Slide Theft-Resistant device into stopper slot.



Step 3: Replace stopper seal.

Step 4: Insert stopper shaft into strainer body, pushing it in until the hook on the Theft-Resistant device snaps into place under the strainer body.

